

1. Check the fit of the flaps to the splitter so that the threaded holes in the splitter align with the cutouts in the flaps.

2. Using a bolt with a washer, lightly attach the flaps to the splitter so that it is possible to move the flaps.

3. The cutouts in the flaps allow you to set its ejection. Set the flaps as you see fit.

4. Once you align the flaps properly, tighten the bolts firmly against the splitter.

